



Flow Meter Sensor

Contents:

- Flow Meter Sensor
- Flow Meter Housing
- (1) O-ring
- (1) Washer


Assembly

1. Place o-ring onto Flow Meter Sensor.
2. Position washer between Housing and o-ring.
IMPORTANT: Place washer and o-ring exactly as illustrated to ensure that the Flow Meter sensor does not puncture the Housing.
3. Screw Flow Meter into Housing until secure. **O-ring and washer should compress evenly around the sensor and the housing.**

HAND TIGHTEN ONLY.

DO NOT OVERTIGHTEN OR DAMAGE WILL RESULT.

4. If the maximum flow rate specified by the flowmeter cannot be detected by the sensor, slightly tighten the sensor into the flow meter no more than 1/16th of a turn. Continue until the maximum flow rate can be detected.

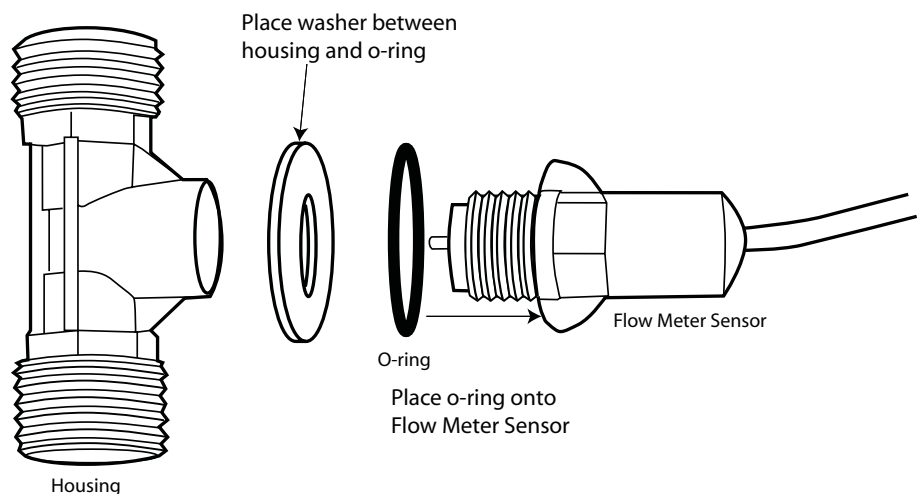

For assistance, contact DICKEY-john
Technical Support at 1-800-637-3302.